




# KB-600-MULTI-Skinny Base Hole Assignment Diagram

8.27.2025 rev 4



35 Pond Park Rd  
Suite 10  
Hingham, MA 02043  
800.456.3198

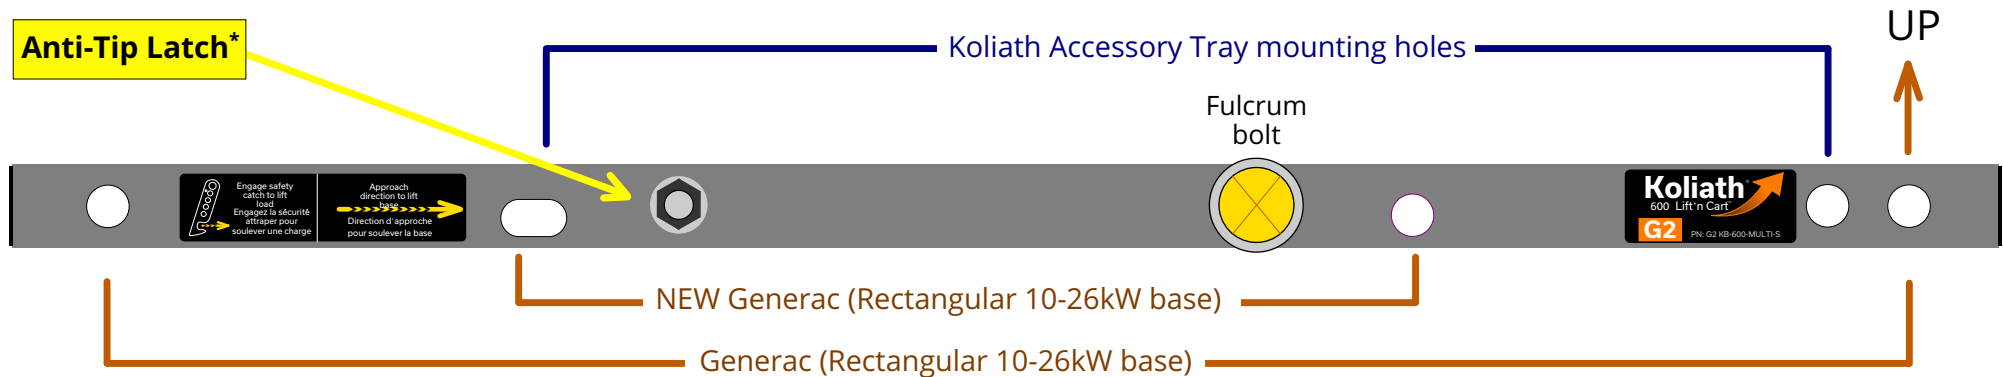

## \*WARNING

ALWAYS engage both anti-tip back latches by pushing down on the handle then pushing forward on handle latch control knobs before attempting to fully lift or move any load.

ONLY initiate lift and latch engagement with the generator from a level surface. This is to prevent possible injury from the generator tipping over backwards before the latches can fully engage with base.

## CAUTION

Holes may have sharp edges inside and out. DO NOT place fingers inside holes or cut-outs.

Do not operate cart on steep hills or inclines over 12 Degrees.

Best practice is to orient the heavier end of the generator forward for better balance and less strain on user.

## TIPS:

To help with alignment when installing rods into base rails, leave nuts loose until both rods are through both side rails. Then hand tighten all four nuts to secure rails to rods.

Plan your approach direction to final install location before attaching base to avoid trenches etc.

Have your generator dropped off at highest point at job site to prevent needing to push loaded cart up hill.